

KIT THERMISTOR RETROFIT HARNESS

100188



Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.

	1		T
Consult the appropriate DTC Service Manual on	Never power compressor without covers in place and	rated safety equipment when	•
turbocor.danfoss.com for detailed service instructions.	secured.	and/or components codes and ensure p	accordance with local codes and ensure pressure
	cover will expose you to a		is fully vented before the removal of refrigerant
	Ensure the mains input power	hazardous voltages that	containing components.
	is off and locked out before removing cover.	can cause serious injury or death.	
	Before removing top cover, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to		
	discharge.		


1 - Introduction:

THERMISTOR RETROFIT HARNESS Removal and Installation Instructions.

2 - Replacement Procedure:

- 1. Isolate the compressor power in accordance with established procedures.
- 2. Connect wrist strap to wrist and connect to appropriate ground.
- 3. Remove service side cover.
- 4. Remove harness connector from J20 of the backplane (it may be necessary to unravel additional length of wire from the conduit).
- 5. Plug in Thermistor Retrofit Harness into J20.
- 6. Plug harness connector (previously pulled from J20) into other end of thermistor retrofit harness.



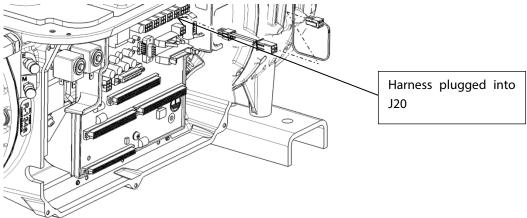

7. Replace the service side cover.



3 - Kit Contents

Kit numbers	Compressor models
100188	All TT models & TG310

QTY	Part(s) Description	Picture(s)
1	Thermistor Retrofit Harness	



Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.