

KIT VFD PRESSURE CONTROL VALVE CABLE

110001.



Consult the appropriate
Danfoss Turbocor
Compressors Inc. (DTC)
Service Manual on
turbocoroem.com for
detailed service instructions.

Never power compressor without covers in place and secured.

Opening the drive panel will expose you to a voltage hazard of up to 575V AC and 900V DC. Ensure the mains input power is off and locked out before opening panel.

Before opening the drive panel, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.

Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.

This equipment contains hazardous voltages that can cause serious injury or death.

Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.

1 - Introduction

This kit contains the VFD Pressure Control Valve Cable. Please refer to our Service Manual for details regarding the replacement of this cable.

We have made the **VTT/VTX Service Manual** available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the top of the page there is a pull-down menu called "Quick Links." Click this menu and select the appropriate service manual.

Refer to the applicable QR code below to download the VTT/VTX Service Manual.

English



Chinese





2 - VFD Pressure Control Valve Cable Removal Instructions

- 1. Isolate VTT/VTX power as described in Section "Electrical Isolation of the VFD" of the Service Manual (M-SV-VT-001).
- 2. Remove the M12 connector from the top of the VFD cooling valve.
- 3. Remove the cover to the controls panel where the CIM is located.
- 4. Remove the VFD Pressure Control Valve Cable from the CIM board.
- 5. Remove the cable.

3 - VFD Pressure Control Valve Cable Installation Instructions

- 1. Install the M12 connector on top of the VFD Pressure Control Valve.
- Terminate the cable to the CIM board.
- 3. Secure the cable.
- 4. Return the compressor to normal operation.

4 - Kit Contents

Kit numbers Compressor models		
110001 VTT/VTX		
QTY	Part(s) Description	Picture(s)
1	CABLE VFD REGULATING VALVE	M12 connection Coil I Coil II Coil I

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

