

TERMINAL BLOCK MAINS/FUSE ASSEMBLY

199K0036, 199K0037, 199K0038, & 199K0039

 Installation and servicing of Danfoss Turbocor® compressors by qualified and product-trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance, and service.			
Consult the appropriate Danfoss LLC Service Manual on www.turbocoroem.com for detailed service instructions.	Never power compressor without covers in place and secured. Removing covers or opening panels will expose you to hazardous voltages. Ensure the mains input power is off and locked out before removing covers or opening panels. Before removing covers or opening panels, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.	Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage. This equipment contains hazardous voltages that can cause serious injury or death.	Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components. After procedure is complete, follow the appropriate leak test and evacuation process before reintroducing refrigerant.

1 - Introduction

Please refer to our service manual for the removal and installation procedures.

To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the bottom of the page there is a Section named "Categories" that includes various menus including one for Manuals.

Refer to the applicable QR code below to download the TT/TG Series Service Manual.

English

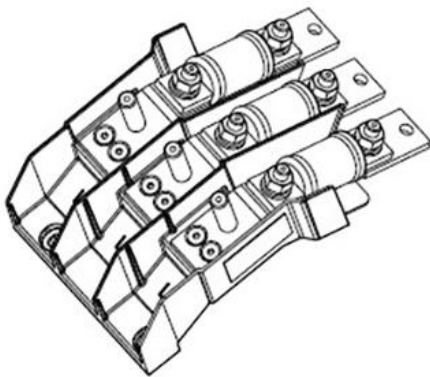 
 


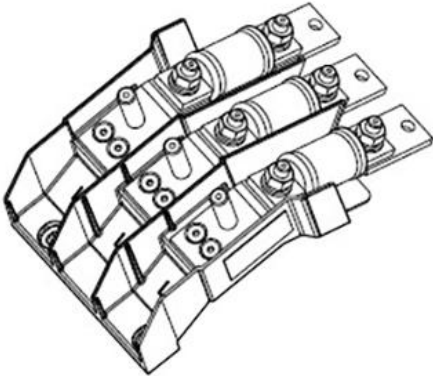 
 
Chinese

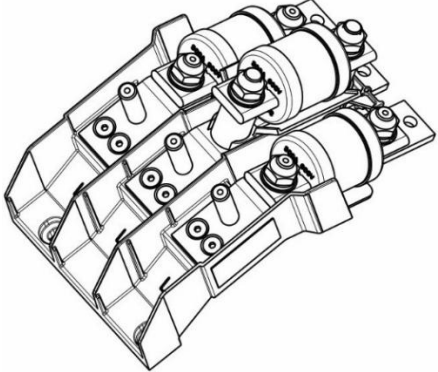 
 
 


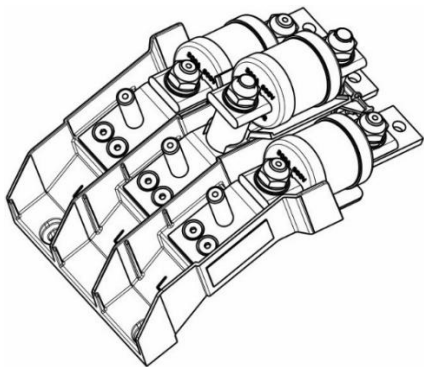 
 
 
2 - Kit Contents

Note: Any part numbers included in the kit contents are internal part numbers only. Please refer to our Spare Parts Manuals for any kit part numbers.

Kit number: 199K0036		
QTY	Part(s) Description	Picture(s)
1	TERMINAL BLOCK ASSY – 600A0545	
2	SCREW, M5x45, SOCKET HEAD CAP – 902817	
3	SCREW, M6x16, SOCKET HEAD CAP – 902818	
2	WASHER, M5, FLAT – 902803	
3	WASHER, M6, FLAT – 902804	
3	WASHER, 3/8", FLAT – 902807	
3	WASHER, M6, SPLIT LOCK – 902809	
3	WASHER, 3/8", SPLIT LOCK – 902812	
3	NUT, 3/8"-16, SPLIT LOCK – 902815	
2	SPACER-ROUND – 901656	

Kit number: 199K0037		
QTY	Part(s) Description	Picture(s)
1	TERMINAL BLOCK ASSY – 300263	
2	SCREW, M5x45, SOCKET HEAD CAP – 902817	
3	SCREW, M6x16, SOCKET HEAD CAP – 902818	
2	WASHER, M5, FLAT – 902803	
3	WASHER, M6, FLAT – 902804	
3	WASHER, 3/8", FLAT – 902807	
3	WASHER, M6, SPLIT LOCK – 902809	
3	WASHER, 3/8", SPLIT LOCK – 902812	
3	NUT, 3/8"-16, SPLIT LOCK – 902815	
2	SPACER-ROUND – 901656	

Kit number: 199K0038		
QTY	Part(s) Description	Picture(s)
1	TERMINAL BLOCK ASSY – 600A0546	
2	SCREW, M5x45, SOCKET HEAD CAP – 902817	
3	SCREW, M6x16, SOCKET HEAD CAP – 902818	
2	WASHER, M5, FLAT – 902803	
3	WASHER, M6, FLAT – 902804	
3	WASHER, 3/8", FLAT – 902807	
3	WASHER, M6, SPLIT LOCK – 902809	
3	WASHER, 3/8", SPLIT LOCK – 902812	
3	NUT, 3/8"-16, SPLIT LOCK – 902815	
2	SPACER-ROUND – 901656	

Kit number: 199K0039		
QTY	Part(s) Description	Picture(s)
1	TERMINAL BLOCK ASSY – 300257	
2	SCREW, M5x45, SOCKET HEAD CAP – 902817	
3	SCREW, M6x16, SOCKET HEAD CAP – 902818	
2	WASHER, M5, FLAT – 902803	
3	WASHER, M6, FLAT – 902804	
3	WASHER, 3/8", FLAT – 902807	
3	WASHER, M6, SPLIT LOCK – 902809	
3	WASHER, 3/8", SPLIT LOCK – 902812	
3	NUT, 3/8"-16, SPLIT LOCK – 902815	
2	SPACER-ROUND – 901656	

3 - List of Changes

Revision	Date	Description of Change
A	8/28/2026	New

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.